



Chime Battery

On certain systems, the word "CHIME" followed by the trouble code "BAT" will display. These terms refer to two separate functions. Please be aware that your system does not have a chime battery. "CHIME" indicates that the chime feature is turned on. The trouble code "BAT" indicates that your system has a low battery that needs to be recharged or replaced. Refer to the [recharge or replace a battery](#) page to troubleshoot a low battery.

Related Topics

[Finding the Right Peripheral Battery](#)

Here you can locate the correct size and type of battery for your device

[Testing Your System](#)

Here are instructions for placing your system in Test mode, and for removing it from Test mode once the test is complete.

[Silence Low Battery Beeping](#)

Here are instructions for silencing your keypad when it has detected a low battery condition

[Return to Top](#)