

## RC8325-ADT

The RC8325 is a Pulse compatible day and night camera. This camera is intended for use with ADT Pulse. It can be used as either a wired or wireless camera using Wi-Fi connectivity.

## RC8325-ADT

## **RC8325-ADT**



| Manual        | RC8325-ADT Wireless Indoor HD Camera Installation Manual  |
|---------------|---|
| Reset         | <ul> <li>Reboot – If your camera is unresponsive or is encountering technical issues, you may need to reboot your camera. To reboot, press and release the Reset button.</li> <li>Clear All Data – If rebooting your camera does not resolve the issue or if you need to re-enroll your camera to Pulse, you may need to clear all data. To clear all data and restore the factory default settings: <ol> <li>Power on the camera</li> <li>Press and hold the Reset button for fifteen seconds</li> <li>When you release the Reset button, the camera is reset to the factory default settings</li> </ol> </li> </ul> |
| Troubleshooti | <ul> <li>Wi-Fi Camera Offline – Please refer to this page if your Wi-Fi is not connected and is listed as "status unknown" in the ADT Pulse app.</li> <li>Camera Video Quality – Please refer to this page if you are encountering issues with your camera's video quality.</li> </ul>  |

|                  | Pulse Gateway Offline – The video gateway controls your wireless connections. Please refer to this page if your device is offline or is receiving a "Status Unavailable" message.  |
|------------------|--|
| Specifications   | <ul> <li>Dimensions: 2.56" (W) x 1.34" (H) x 1.34" (D)</li> <li>Video Compression: H.264 and MJPEG</li> <li>Image Resolution: VGA (640x480), QVGA (320x240), and 720p (1280x720)</li> <li>Operating Temp: 32°F to 104°F</li> <li>Storage Temp: -4°F to 158°F</li> <li>Network interface: 1 RJ-45 LAN connection for Ethernet through Micro USB to RJ-45 adapter cable</li> <li>Wireless Interface: IEEE 802.11n/802.11b/802.11g compatible, WEP 64/128 bit, WPA/WPA2 personal security support</li> <li>LEDs: 1 Power and 1 Network/WPS LED</li> <li>Power Adapter: 12V/1A, 100-240 VAC</li> </ul> |
| Communication    | This camera can use Wi-Fi to connect to Pulse, or it can be hardwired directly to the gateway/switch using the provided adapter.   |
| Pulse Enrollment | This camera can be enrolled through the Manage Device section of the Web or Admin Portal. This device must be paired to Pulse while it is wired to the gateway using the provided adapter. For help enrolling your camera, please refer to the Pulse Camera Add On and Replacement page.   |

## Return to Top