




ADT Command 7" Touchscreen Quick Guide

****Pardon our Dust - This Page is Under Construction****

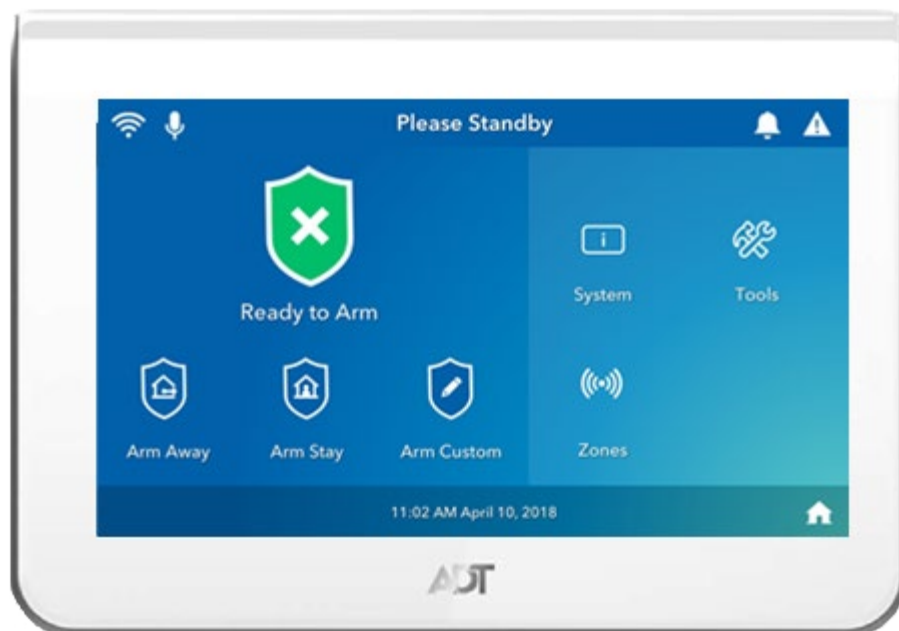

For a detailed review of the entire system, please view the ADT Command 7" Touchscreen manual.

[Arm & Disarm](#) [Battery](#) [Bypass Protected Areas](#) [Date & Time Settings](#) [Chimes & Beeps](#) [Reset](#) [Security Codes](#) [Trouble Conditions](#) [Volume](#)

Arm and Disarm

Arm:

Disarm:

-

Battery

- The ADT Command 7" Touchscreen operates on a 3.6 or 4.2V 7500mAh battery pack.

For instructions on replacing your battery, please visit our [Battery Replacement Page](#).

Bypass Protected Areas

For more information on this topic please visit the complete ADT Command 7" Touchscreen manual.

Change Date and Time

To access date and time settings:

-

For more information on this topic please visit the complete ADT Command 7" Touchscreen manual.

Chimes and Beeps

Your system communicates events using chimes and beeps whenever a protected door or window is opened.

-

For more information on this topic please visit the complete ADT Command 7" Touchscreen manual.

Reset

It is recommended that you clear the system status after an alarm event.

- To reset your panel,

For more information on this topic please visit the complete ADT Command 7" Touchscreen manual.

Security Codes

To set-up the user codes:

-

For more information on this topic please visit the complete ADT Command 7" Touchscreen manual.

Trouble Conditions

For more information on this topic please visit the ADT Command 7" Touchscreen Troubleshooting page.

Volume

-

For more information on this topic please visit the complete ADT Command 7" Touchscreen manual.

[Return to Top](#)