



# Ademco Lynx - Quick Guide



For a detailed review of the entire system, please view the [Ademco Lynx manual](#).

[Arm & Disarm the System](#)   [Battery](#)   [Bypass Protected Areas](#)   [Date & Time Settings](#)   [Chimes & Beeps](#)   [Reset](#)   [Security Codes](#)   [Trouble Conditions](#)   [Volume](#)

## Arm and Disarm

### Arm:

- To arm all sensors in AWAY mode when you are leaving the premises, enter your [security code] + [AWAY] or press and hold [AWAY].
- To arm all sensors in STAY mode when you are not leaving the premises, enter your [security code] + [STAY] or press and hold [STAY].

### Disarm:

- To disarm, enter your [security code] + [OFF].

For more information on this topic please visit the complete [Ademco Lynx manual](#).

## Battery

- The Ademco Lynx operates on the [7.2V Battery Pack](#).
- Loss of AC power and use of Backup Battery Power is indicated by **No AC**.
- A Low Battery condition is indicated by **Low Bat**.

## Bypass Protected Areas

Bypassing a zone allows you to arm your system with certain protected areas intentionally unarmed or to access a protected area when the system is armed.

- To bypass a zone, enter your [security code] + [BYPASS] + [2-digit zone number].
- To unbyypass a zone, enter your [security code] + [OFF].

For more information on this topic please visit the complete [Ademco Lynx manual](#).

## Change Date and Time

Enter your [Master code] + [# - FUNCTION] + [6] + [3].

- When 'SET TIME' appears, enter the 2-digit hour, i.e. 01-12.
- Press [\*] and choose [1] for PM or [0] for AM, then press [\*] again.
- Enter the 2-digit minute, i.e., 14 for 6:14, then press [\*].
  
- Enter the 2-digit month, i.e., 03 for March, then press [\*].
- Enter the 2-digit day, i.e., 23 for March, 23, then press [\*].
- Enter the 2-digit year, i.e., 15 for March 23, 2015, then press [\*] to accept the entry and exit Clock-Setting mode. The keypad will beep 4 times in confirmation.

## Chimes and Beeps

When your system is in chime mode, a chime alert will sound three tones whenever a protected door/window is opened.

- To turn the door chime function on and off, press [FUNCTION] + [CHIME].

For more information on this topic please visit the complete [Ademco Lynx manual](#).

## Reset

To clear the display after an alarm event, enter your [security code] + [OFF] to clear the alarm event

history.

## Security Codes

You can program up to 6 additional user codes.

- To change the Master Code, enter the [Master Code] + [8 - CODE] + [02] + [new Master Code] + new Master Code].
- To add a user, enter the [Master Code] + [8 - CODE] + [2-digit user number/slot 03-06] + [new user code].
- To erase a user, enter the [Master Code] + [8 - CODE] + [2-digit user number/slot 03-06] and wait approximately three seconds for the keypad to beep and verify.

Some user numbers have already been programmed:

User Type/Role/Level	Function	User Number/Slot
Master	All functions	[02]
Babysitter	Can always arm the system can only disarm if it was used to arm the system.	[07]
Duress	Secretly notifies the monitoring center of duress if programmed. Intended for use only when you are forced to arm or disarm the system against your will.	[08]

For a complete list of use authority levels and partitions, please see the [Ademco Lynx manual](#).

## Trouble Conditions

Trouble conditions are indicated by the word CHECK and continual beeping from the touchpad. Any key will silence the beeping. A display of CHECK + zone no. may indicate that a problem requires your attention. Check the specified zone area, close any open doors or windows and enter your security code and press [OFF]. If your system includes wireless sensors, the CHECK condition may be caused by some change in the environment of the protected area.

**To silence trouble beeps, press any key or enter your security code and press [OFF].**

For a complete list of Trouble Conditions, please refer to the [Ademco Lynx & QuickConnect Troubleshooting](#) page.

## Volume

System announcements and status beep volume can be adjusted.

- To **adjust the volume level**, press [FUNCTION] + [VOLUME] + [3]/[6].
- [3] increases the volume by one level and [6] decreases the volume by one level.
- To **mute the volume**, press [FUNCTION] + [VOLUME] + [OFF].

Return to Top