



DSC 9155 Alexor - Quick Guide



For a detailed review of the entire system, please view the [DSC 9155 Alexor manual](#).

[Arm & Disarm the System](#) [Battery](#) [Bypass Protected Areas](#) [Date & Time Settings](#) [Chimes & Beeps](#) [Reset](#) [Security Codes](#) [Trouble Conditions](#) [Volume](#)

Arm and Disarm

Arm:

- To arm all sensors in **AWAY mode** when you are leaving the premises, press and hold the [AWAY] key for two seconds or enter your [security code] and exit before the exit delay expires.
- To arm all sensors in **STAY mode** without interior sensors armed, press and hold the [STAY] key for two seconds or enter your [security code] and do not leave the premises.

Disarm:

- To disarm, enter your [security code] + [OFF].

For more information on this topic, please visit the complete [DSC 9155 Alexor manual](#).

Battery

The DSC 9155 Alexor operates on a [12V 2.3Ah battery](#).

Bypass Protected Areas

Bypassing a zone allows you to arm your system with certain protected areas intentionally unarmed or to access a protected area when the system is armed.

- **To bypass a zone**, press [*] + [1] + [zone number].
- Press [#] to exit.

- **To unbypass**, press disarm the system.

For more information on this topic please visit the complete [DSC 1550/1500 manual](#).

Change Date and Time

To change the date and time:

- Press [*] + [6] + [Master security code] to enter the function menu.
- Use the [<>] to find the menu [Time and Date] menu option, then press [*] to select.
- Enter the minutes and hours in 24 hour format, i.e., 18:45 for 6:45pm.
- Enter the date, months, and year in MM:DD:YY format, i.e., 082315 for August, 23, 2015.
- Press [#] to exit.

Chimes and Beeps

When your system is in chime mode, a chime alert will sound three tones whenever a protected door/window is opened.

- To turn the door chime function on and off, press and hold [Chime] for several seconds or press [*] + [4].

For more information on this topic please visit the complete [DSC 9155 Alexor manual](#).

Reset

To clear the display after an alarm event, enter your [security code] + [OFF] to clear the alarm event history.

Security Codes

You can program up to 16 additional user codes and attributes. Additional users can be assigned attributes.

- To program **a new user**, press [*] + [5] + [Master security code] to enter the access codes menu.
- Enter the two digit number to be programmed, i.e., 06 for Access Code 6.
- Enter the new user's new code.
- Continue adding additional user codes or press [#] to exit.

- To **erase** an access code, press [*] + [5] + [Master code] to enter the access codes menu.
- Select the code you wish to delete and enter [*] as the first digit (if * is entered as the first digit then the system will delete the code immediately and the user will be returned to the next code in line).

For more information on user codes, please see the [DSC 9155 Alexor manual](#).

Trouble Conditions

When a trouble condition is detected, the Trouble or System indicator will turn on and the keypad will beep every 10 seconds.

- To silence the Trouble Condition beeps, press [#].
- To view the Trouble Condition, press [*] + [2].

For a list of Trouble Conditions other than CHECK, please see your [DSC 9155 Alexor manual](#).

Volume

System announcements and status beep volume can be adjusted.

- To adjust the buzzer volume level, press [*] + [6] + [Master code].
- Use the [<>] keys to scroll to [Buzzer Control].
- Select [*] to choose from one of the 21 possible volume levels.

[Return to Top](#)