




ITI Concord Express Quick Guide

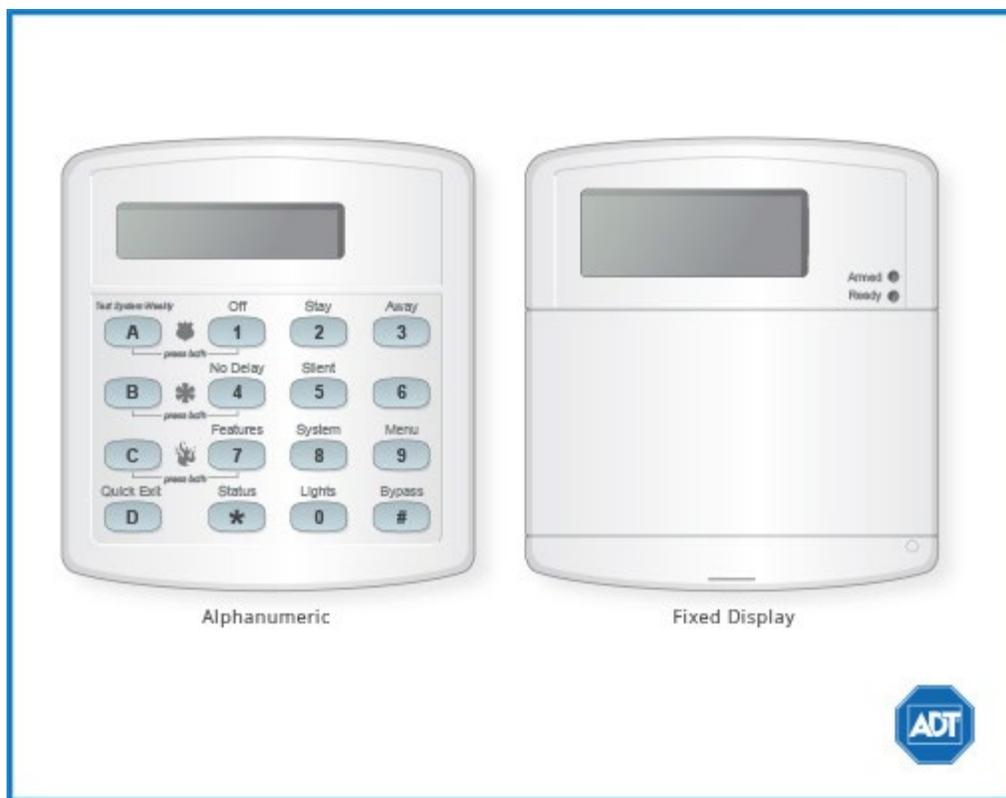

For a detailed review of the entire system, please view the [ITI Concord Express manual](#).

Arm & Disarm the System	Battery	Bypass Protected Areas	Date & Time Settings	Chimes & Beeps	Reset	Security Codes	Trouble Conditions	Volume
---------------------------------------------	-------------------------	----------------------------------------	------------------------------------------	------------------------------------	-----------------------	--------------------------------	------------------------------------	------------------------

Arm and Disarm

Arm:

- To arm in STAY mode when you are not leaving the premises, press [2] + [security code].
- To arm in AWAY mode when you are leaving the premises, press [3] + [security code].

Disarm:

- To disarm, press [1] + [security code].

For more information on this topic please visit the complete [ITI Concord Express manual](#).

Battery

- The ITI Concord Express operates on a [UB 1270 battery](#).
- Loss of AC power and use of backup battery power is indicated by **NO AC**.
- A low battery condition is indicated by BAT.
- For instructions on replacing your battery, please go to the [Battery Replacement Page](#) for this battery.

Bypass Protected Areas

Bypassing a zone allows you to arm your system with certain protected areas intentionally unarmed or to access a protected area when the system is armed.

- To bypass a zone, press [BYPASS] + [code] + [sensor number].
- The touchpad will display "BYPASSED ZONES" or "SENSOR BYPASSED"
- To **unbypass** a zone, arm , then disarm the system.

For more information on this topic please visit the complete [ITI Concord Express manual](#).

Change Date and Time

- To change the time settings, enter the programming menu by pressing [9] + [Master code].
- Enter [0] + [0].
- Enter the time in 24-hour format, i.e., 16:40 for 4:40pm, then press [#].
- Press [*] + [4] + [#] to exit Time settings.

- To change the date settings, enter the programming menu by pressing [9] + [Master code].
- Enter [0] + [1].
- Enter the current date in mm/dd/yy form, i.e., 08/23/15 for August 23, 2015, then press [#].
- Press [*] + [4] + [#] to exit Date settings and the programming menu.

Chimes and Beeps

When your system is in chime mode, a chime alert will sound three tones whenever a protected door/window is opened.

- To turn chime mode on and off, press [7] + [1].

For more information on this topic please visit the complete [ITI Concord Express manual](#).

Reset

To clear the display after an alarm event, disarm your system by pressing [1] + [security code].

Security Codes

Your system allows up to 16 different security codes for use by other users.

- To add a user code, enter the programming menu by pressing [9] + [Master code].
- Press [1] + [0] + [new user number] + [new user 4 digit code] + [#].
- Press [*] + [4] + [#] to exit the programming menu.

- To **delete a user code**, enter the programming menu by pressing [9] + [Master code] + [1] + [0].
- Enter the [Master code] + [#].
- Press [*] + [4] + [#] to exit the programming menu.

For more information on on this topic please visit the complete [ITI Concord Express manual](#).

Trouble Conditions

Trouble conditions are issues that require your attention and are indicated on your panel's display by and beeping from the touchpad.

- To silence Trouble Conditions beeping, check that the zone's protected areas are closed and secure. For wireless sensors, check that no environmental changes have blocked the wireless sensor.
- Once the problem is corrected, press [*] or arm the system.].

For more information on this topic please visit the complete [ITI Concord Express manual](#).

Volume

- To change the status beep tone pitch, press and hold [*] and [0] until you hear a steady tone, then release the buttons.
- Press and hold [1] to lower the pitch or [2] to raise the pitch.
- Release the button when the desired pitch is heard.

[Return to Top](#)