



Silence Low Battery Beeping

Silence alerts and beeps for the most common ADT systems.

A Low Battery Warning is most often displayed as BAT, LOW BATT or SYSTEM LO BAT on the touchpad. In addition, many systems will “beep” or “chirp” to alert you that a system or peripheral device battery is low. This warning signals that your battery must be either recharged or replaced.

On most systems, low battery trouble beeps can be silenced by entering one of the following sequences on the keypad. If you do not see your system below, please refer to your system manual.

Unsure which system is yours?

1. While logged into [MyADT](#), click on the blue Overview tab located on the left side of the top menu.
2. On the Overview page, to the right of the Bill & Payment Summary section, you will find “System Information.”
3. The name of your system will be shown (e.g., Safewatch Pro 3000).

Common Silence Beeping Keypad Combinations:

Ademco Lynx: press any key, or enter [security code] + [OFF]

Ademco Vista 20P: press any key

Ademco Vista 20SE/HWSE: press any key

BHS 300 or BHS 4000: [CANCEL], [CANCEL]

DSC Impassa: press [#]

DSC 1555: press any key

ITI Concord Express: [1] + [security code]

Safewatch Pro 3000: press any key

Safewatch QuickConnect Plus: press any key, or enter [security code] + [OFF]

Simon XT: press [STATUS]

TSSC: [OFF]

Don't see your system listed here? Please [refer to your system manual](#) or search our Help Center for more information.



Copyright © 2015 ADT Security Services. All rights reserved.

