



Quick Guide: Ademco Lynx



For a detailed review of the entire system, please view the [Ademco Lynx system manual](#).

Arm and Disarm

Arm:

- To arm all sensors in **AWAY mode** when you are leaving the premises, enter your [security code] + [AWAY] or press and hold [AWAY].
- To arm all sensors in **STAY mode** when you are not leaving the premises, enter your [security code] + [STAY] or press and hold [STAY].

Disarm:

- To **disarm**, enter your [security code] + [OFF].

Battery

- The Ademco Lynx operates on the 7.2V Battery Pack.
- Loss of AC power and use of backup battery power is indicated by **No AC**.
- A low battery condition is indicated by **Low Bat**.
- For instructions on replacing your battery, please visit our [Battery Replacement Page](#).

Bypassing Protected Areas

Bypassing a zone allows you to arm your system with certain protected areas intentionally unarmed or to access a protected area when the system is armed.

- To **bypass a zone**, enter your [security code] + [BYPASS] + [2-digit zone number].
- To **unbypass a zone**, enter your [security code] + [OFF].

Change Time and Date

- Enter your [Master code] + [FUNCTION] + [6] + [3].
- When 'SET TIME' appears, enter the 2-digit hour, i.e., 18 for 6:00.
- Press [ADD] and choose [1] for PM or [0] for AM, then press [ADD] again.
- Enter the 2-digit minute, i.e., 14 for 6:14, then press [ADD].

- Enter the 2-digit month, i.e., 03 for March, then press [ADD].
- Enter the 2-digit day, i.e., 23 for March, 23, then press [ADD].
- Enter the 2-digit year, i.e., 15 for March 23, 2015, then press [ADD] to accept the entry and exit Clock-Setting mode. The keypad will beep 4 times in confirmation.

Chimes and Beeps

When your system is in chime mode, a chime will sound three beeps whenever a protected door/window is opened.

- To turn the door chime function on and off, press [FUNCTION] + [CHIME].

Reset

To clear the display after an alarm event, enter your [security code] + [OFF] to clear the alarm event history.

Security Codes

You can program up to 6 additional user codes.

- To **add** a user, enter the [Master code] + [CODE] + [new user number] + [new user code].
- To **erase** a user, enter the [Master code] + [CODE] + [user number] and wait approximately three seconds for the keypad to beep and verify.

Some user numbers have already been programmed:

Pre-programmed User	Function	Code
Installer	All functions	[1]
Master	All functions	[2]
Babysitter	Only arm the system.	[7]
Duress	Secretly notifies the monitoring center of duress.	[8]

Trouble Conditions

When a trouble condition is detected, the word 'FAULT' will be displayed on the panel.

- The exiting Trouble Condition keyword will appear on the display.
- To silence the Trouble Condition beeps, enter your [security code] + [OFF].

For a list of possible Trouble Conditions, please see the [Ademco Lynx system manual](#).

Volume

System announcements and status beep volume can be adjusted.

- To **adjust the volume level**, press [FUNCTION] + [VOLUME] + [3]/[6].
- [3] increases the volume by one level and [6] increases the volume by one level.

- To mute the volume level, press [FUNCTION] + [VOLUME] + [OFF].



Copyright © 2015 ADT Security Services. All rights reserved.

