



Quick Guide: Ademco Vista - 10

For a detailed review of the entire system, please view the [Ademco Vista 10 system manual](#).

Arm and Disarm

Arm:

- To arm in **STAY** mode when you are not leaving the premises, enter your [security code] + [STAY].
- To arm in **AWAY** mode when you are leaving the premises, enter your [security code] + [AWAY].
- To arm in **MAX** when there is no entry delay, enter your [security code] + [MAX]

Disarm:

- To **disarm**, enter your [security code] + [OFF].

Battery

- The Ademco Vista 10 operates on a **UB 1270** battery.
- Loss of AC power and use of backup battery power is indicated by **NO AC**.
- A low battery condition is indicated by **BAT**.
- For instructions on replacing your battery, please visit our [Battery Replacement Page](#).

Bypassing Protected Areas

Bypassing a zone allows you to arm your system with certain protected areas intentionally unarmed or to access a protected area when the system is armed.

- To **bypass** a zone, enter your [security code] + [BYPASS] + [2 digit zone number].
- To **unbypass** a zone, disarm the system.

Change Time and Date

- To change date and time settings, enter your [security code] + [#] + [6] + [3].
- Wait until time/date are displayed, then press [*] to move the cursor ahead and [#] to move back.
- Enter the 2-digit hour and minute settings, i.e., [06] and [17] for 6:17.
- Press [1] for PM or [2] for AM.
- Continue to enter 2-digit year, month, and day settings, i.e., [15], [08], and [23] for August 23, 2015.
- To exit, press [*] when the cursor is on the last digit.

Chimes and Beeps

When your system is in chime mode, a chime alert will sound three tones whenever a protected door/window is opened.

- To turn chime mode on and off, enter your [security code] + [CHIME].

Reset

To **clear** the display after an alarm event, enter your [security code] + [OFF] sequence twice to clear the alarm event history.

Security Codes

Your system allows additional security codes for use by other users, however only the Master user can assign user codes to users.

- To **add a user code**, enter your [Master code] + [8] + [new user number] + [4-digit new user's code].
- To **delete a user code**, enter your [Master code] + [8] + [user number]. Wait approximately three seconds for the keypad to verify.
- To **assign an authority level**, enter your [Master/Part. Prog code] + [8] + [user number] + [#] + [1] + [authority level].

Some user authority levels have been pre-programmed:

User Authority Level	Explanation	Code to assign to user
Master	Can perform all functions and assign codes.	[Master code] + [8] + [2] + [new master code] + [new

		master code again]
Standard	Can only perform security function in assigned partitions.	[0]
Arm Only	Can only arm the system.	[1]
Guest	Can arm the system in assigned partitions, but cannot disarm the system unless the system was armed with this code. Perfect for babysitters, cleaners, etc.	[2]
Duress	Intended for use for when you are forced to arm or disarm the system against your will.	[3]
Partition Programmer	Can do everything a Standard user can do plus assigning user codes to partitions.	[4]

For a complete list partition codes, please see the [Ademco Vista 10 system manual](#).

Trouble Conditions

Trouble conditions are issues that require your attention and are indicated on your panel's display by the word **CHECK** + zone number and accompanied by beeping from the touchpad.

- To silence Trouble Conditions beeping, check that the zone's protected areas are closed and secure. For wireless sensors, check that no environmental changes have blocked the wireless sensor.
- If the problem is corrected, enter your [security code] + [OFF] sequence twice.

For a list of Trouble Conditions other than **CHECK**, please see your [Ademco Vista 10 system manual](#).



Copyright © 2015 ADT Security Services. All rights reserved.

