




Quick Guide: Safewatch Pro 3000

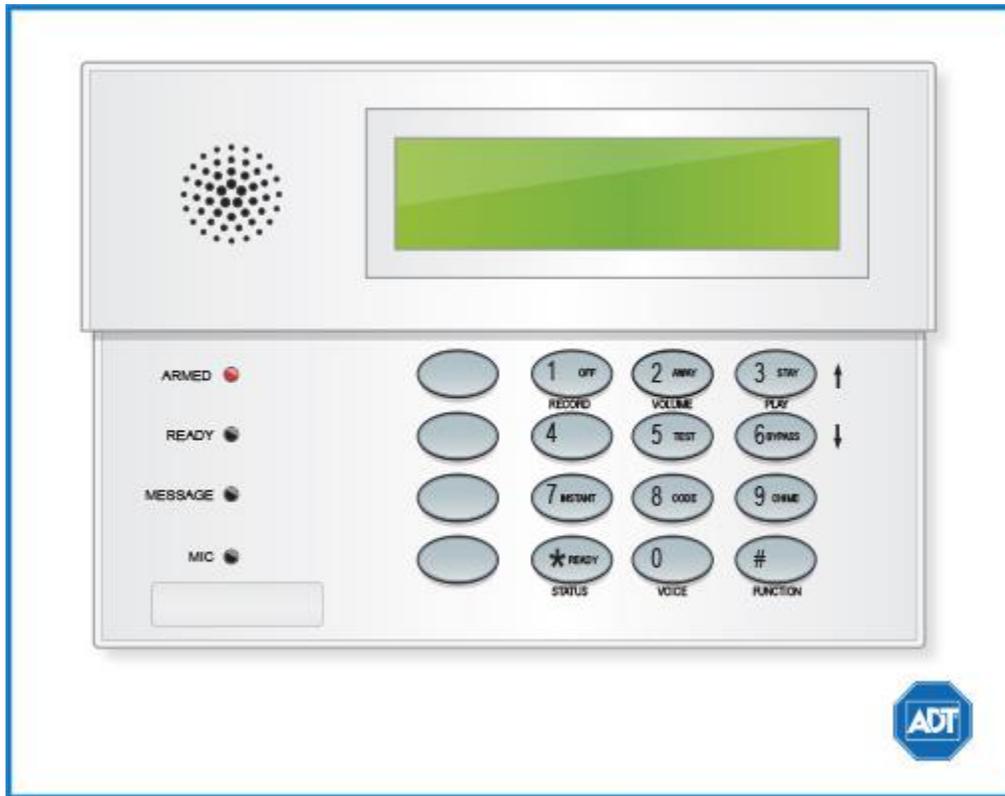

For a detailed review of the entire system, please view the [Safewatch Pro 3000](#).

Arm and Disarm

Arm:

- To arm in **STAY mode**, when you are not leaving the premises, enter your [security code] + [3].
- To arm in **NIGHT-STAY mode**, with interior zones armed, enter your [security code] + [3] + [3].
- To arm in **INSTANT mode**, enter your [security code] + [7].
- To arm in **AWAY mode**, when you are leaving the premises, enter your [security code] + [2].

Disarm:

- To **disarm**, enter your [security code] + [1].

Battery

- The Safewatch Pro 3000 operates on a **UB 1270** battery.

- Loss of AC power and use of backup battery power is indicated by **NO AC**.
- A low battery condition is indicated by **BAT**.
- For instructions on replacing your battery, please visit our [Battery Replacement Page](#).

Bypassing Protected Areas

Bypassing a zone allows you to arm your system with certain protected areas intentionally unarmed or to access a protected area when the system is armed.

- To **bypass** a zone, enter your [security code] + [6] + [zone number].
- Once the panel displays "BYPASS", arm the system as usual.
- To display all bypassed zones, press [6].

- To **unbypass** a zone, disarm the system.

Change Time and Date

- To change date and time settings, enter your [security code] + [#] + [6] + [3].
- Wait until time/date are displayed, then press [*] to move the cursor ahead and [#] to move back.
- Enter the 2-digit hour and minute settings, i.e., [06] and [17] for 6:17.
- Press [1] for PM or [2] for AM.
- Continue to enter 2-digit year, month, and day settings, i.e., [15], [08], and [23] for August 23, 2015.
- To exit, press [*] when the cursor is on the last digit.

Chimes and Beeps

When your system is in chime mode, a chime alert will sound three tones whenever a protected door/window is opened.

- To turn chime mode on and off, enter your [security code] + [9].

Reset

To silence an alarm and to clear memory of an alarm event, enter the [security code] + [1] sequence twice.

Security Codes

Your system allows up to 45 different security codes for use by other users, however only the Master user or Partition Programmer can assign user codes to users.

Users are also assigned an Authority Level, which defines the functions a particular user can and cannot perform.

- To **add a user code**, enter your [Master/Partition Programmer code] + [8] + [user #] + [new user's code].
- To **delete a user code**, enter your [Master/Part. Prog code] + [8] + [user number] + [#] + [0].
- To **assign an authority level**, enter your [Master/Part. Prog code] + [8] + [user number] + [#] + [1] + [authority level].

Some user authority levels have been pre-programmed:

User Authority Level	Explanation	Code to assign to user
Master	Can perform all functions and assign codes.	[Master code] + [8] + [2] + [new master code] + [new master code again]
Standard	Can only perform security function in assigned partitions.	[0]
Arm Only	Can only arm the system.	[1]
Guest	Can arm the system in assigned partitions, but cannot disarm the system unless the system was armed with this code. Perfect for babysitters, cleaners, etc.	[2]
Duress	Intended for use for when you are forced to arm or disarm the system against your will.	[3]
Partition Programmer	Can do everything a Standard user can do plus assigning user codes to partitions.	[4]

For a complete list of use authority levels and partitions, please see the [Safewatch Pro 3000 system manual](#).

Trouble Conditions

Trouble conditions are issues that require your attention and are indicated on your panel's display by the word **CHECK** + zone number and accompanied by beeping from the touchpad.

- To **silence** Trouble Conditions beeping, check that the zone's protected areas are closed and secure. For wireless sensors, check that no environmental changes have blocked the wireless sensor.
- If the problem is corrected, enter the [security code] + [OFF] sequence twice.
- For a list of Trouble Conditions other than **CHECK**, please see your [Safewatch Pro 3000 manual](#).

