



# Carbon Monoxide Battery Replacement

Wireless carbon monoxide detectors require battery replacement periodically. A low battery is indicated by a trouble condition on your system keypad.

Changing the battery in your carbon monoxide detector is quick and easy. If you have your replacement battery ready to go, you can follow these step-by-step instructions.

If you are not sure which battery you need, visit our [peripheral battery replacement](#) page to find out.




[Instructions](#)

[Related Topics](#)


## Step-by-Step Instructions

### To replace your carbon monoxide detector battery:


1. Locate the zone where the low battery signal is coming from. Most systems will display a Trouble Condition and a zone number on the keypad.
2. [Put your system in test mode](#). This will result in a brief siren and beeping from your panel in 30 second intervals.
3. Take the carbon monoxide detector off its base by turning the device cover counter-clockwise approximately 1/2 of an inch.

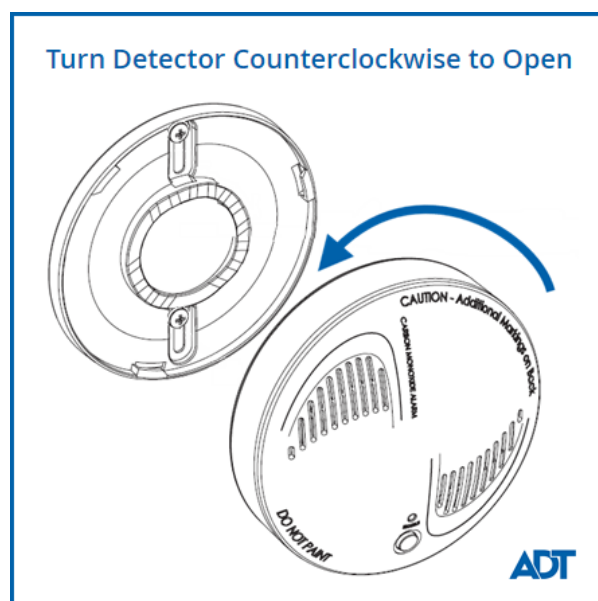

4. Locate the Battery Compartment; there may be a door or plate covering it. Remove the old battery. Some devices may have two to three batteries. If this is the case, make sure you remove and replace all batteries at the same time.

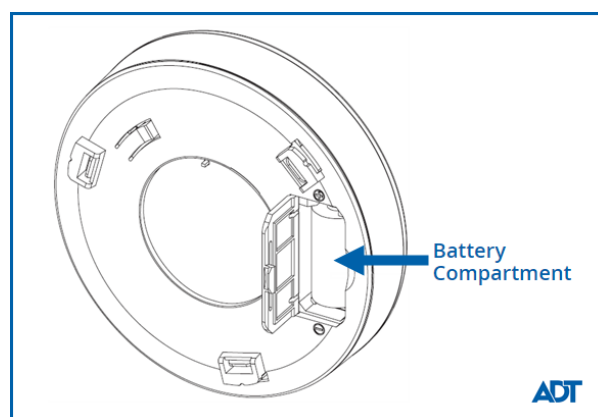

5. Wait at least 30 seconds before inserting the new battery. Pay close attention to the direction of the (+) and (-) signs to ensure proper installation.
6. Reattach the carbon monoxide detector to the mounting bracket by lining up the marker on the body of the device with the marker on the base and turning the detector cover clockwise about half of inch.
7. Test the device by pressing the Test button for about 10 seconds or until the siren sounds and the LED light starts blinking. The siren verifies that the carbon monoxide detector is working properly. Once the Test button is released, the siren will shut off and the red LED light will stop blinking.

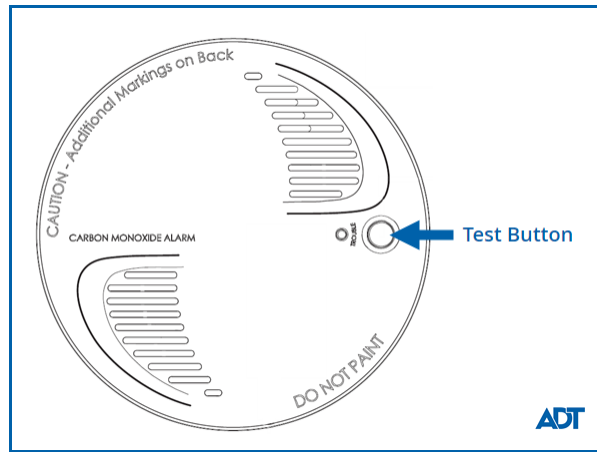

8. Reset your keypad. Refer to the [System Identification](#) page for instructions.
9. [Remove your system from test mode.](#)
10. Recycle the old battery. To find a recycler, visit [Call2Recycle](#). Returning a battery to a recycler on this site is free of charge and will ensure that the battery is recycled according to regulatory requirements.

## Related Topics

### [Finding the Right Peripheral Battery](#)

Here you can locate the correct size and type of battery for your device

### [Testing Your System](#)

Here are instructions for placing your system in Test mode, and for removing it from Test mode once the test is complete.

### [Carbon Monoxide Detector Troubleshooting](#)

Here are instructions for troubleshooting problems with your carbon monoxide detector

### [Peripheral Device Manuals](#)

Here you will find the manuals for several carbon monoxide detector models

[Return to Top](#)